COOKTOP PARTS

For Models: RF367LXSQ2, RF367LXSB2, RF367LXSS2, RF367LXSY2
(Designer White) (Black) (S.Steel) (Universal Silver)

30" ELECTRIC CERAN
FREESTANDING RANGE
SELF CLEAN OVEN

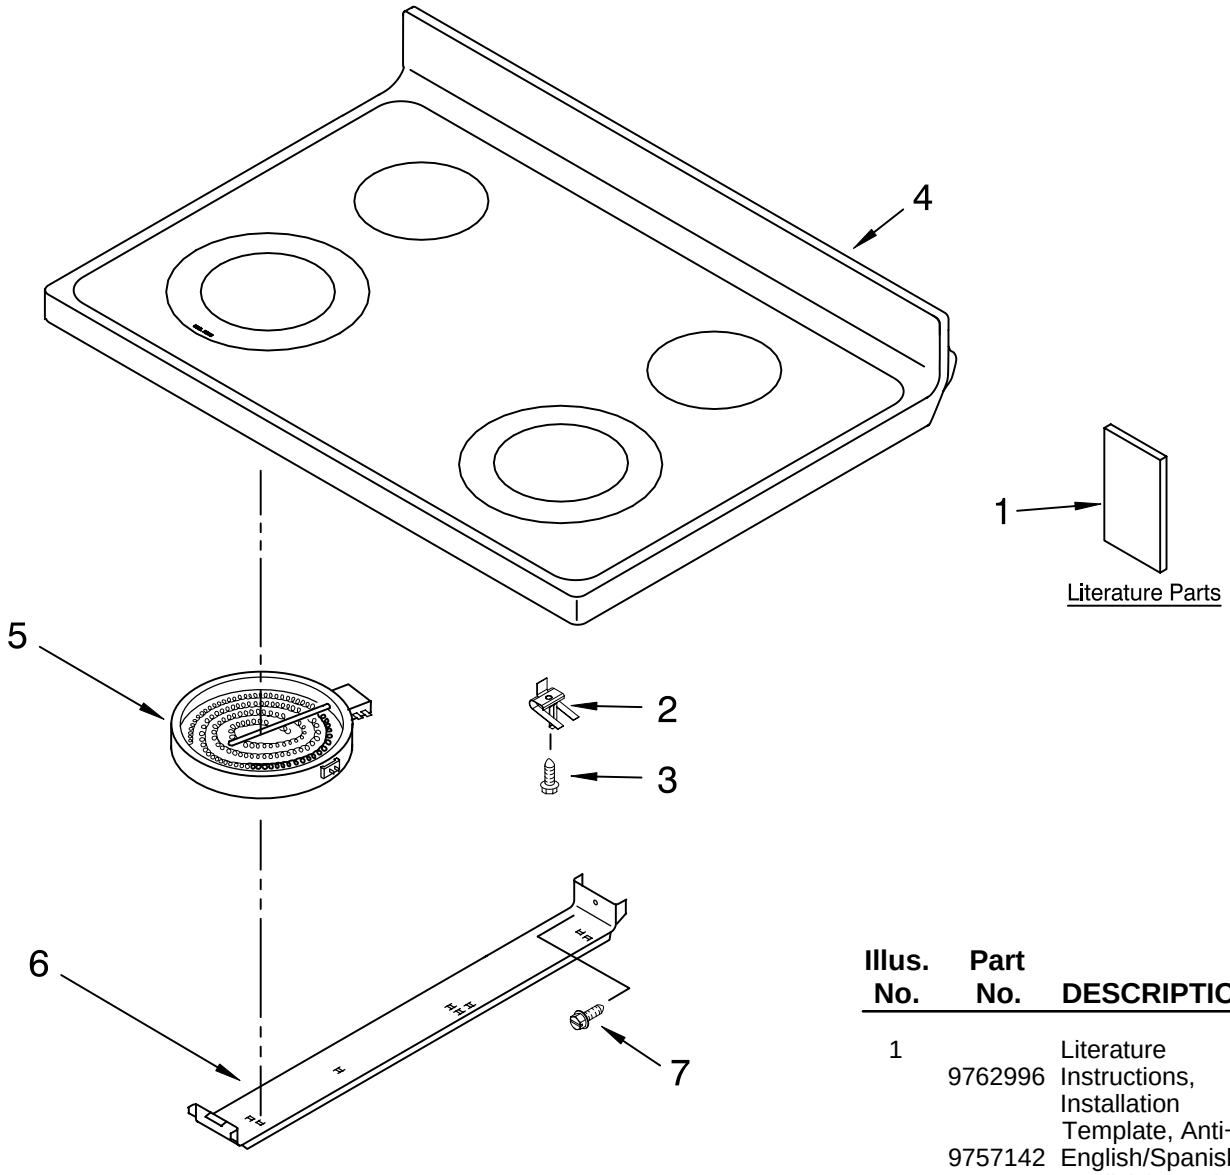

Illus. No.	Part No.	DESCRIPTION
1		Literature
	9762996	Instructions, Installation Template, Anti−Tip
	9757142	English/Spanish
	9757143	English/French
	9763001	Owners Manual
	W10116310	Tech Sheet
	9762761	Safer Cooking Tips
2	W10035930	Spring, Locator
3	3196170	Screw
4		Cooktop
	9763330	White
	9763332	Black
5		Element, Surface
	8523047	2400/1000W − LF,RF
	8273994	1200 W − LR,RR
6	8272791	Bracket, Element
7	3196169	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: RF367LXSQ2, RF367LXSB2, RF367LXSS2, RF367LXSY2
(Designer White) (Black) (S.Steel) (Universal Silver)

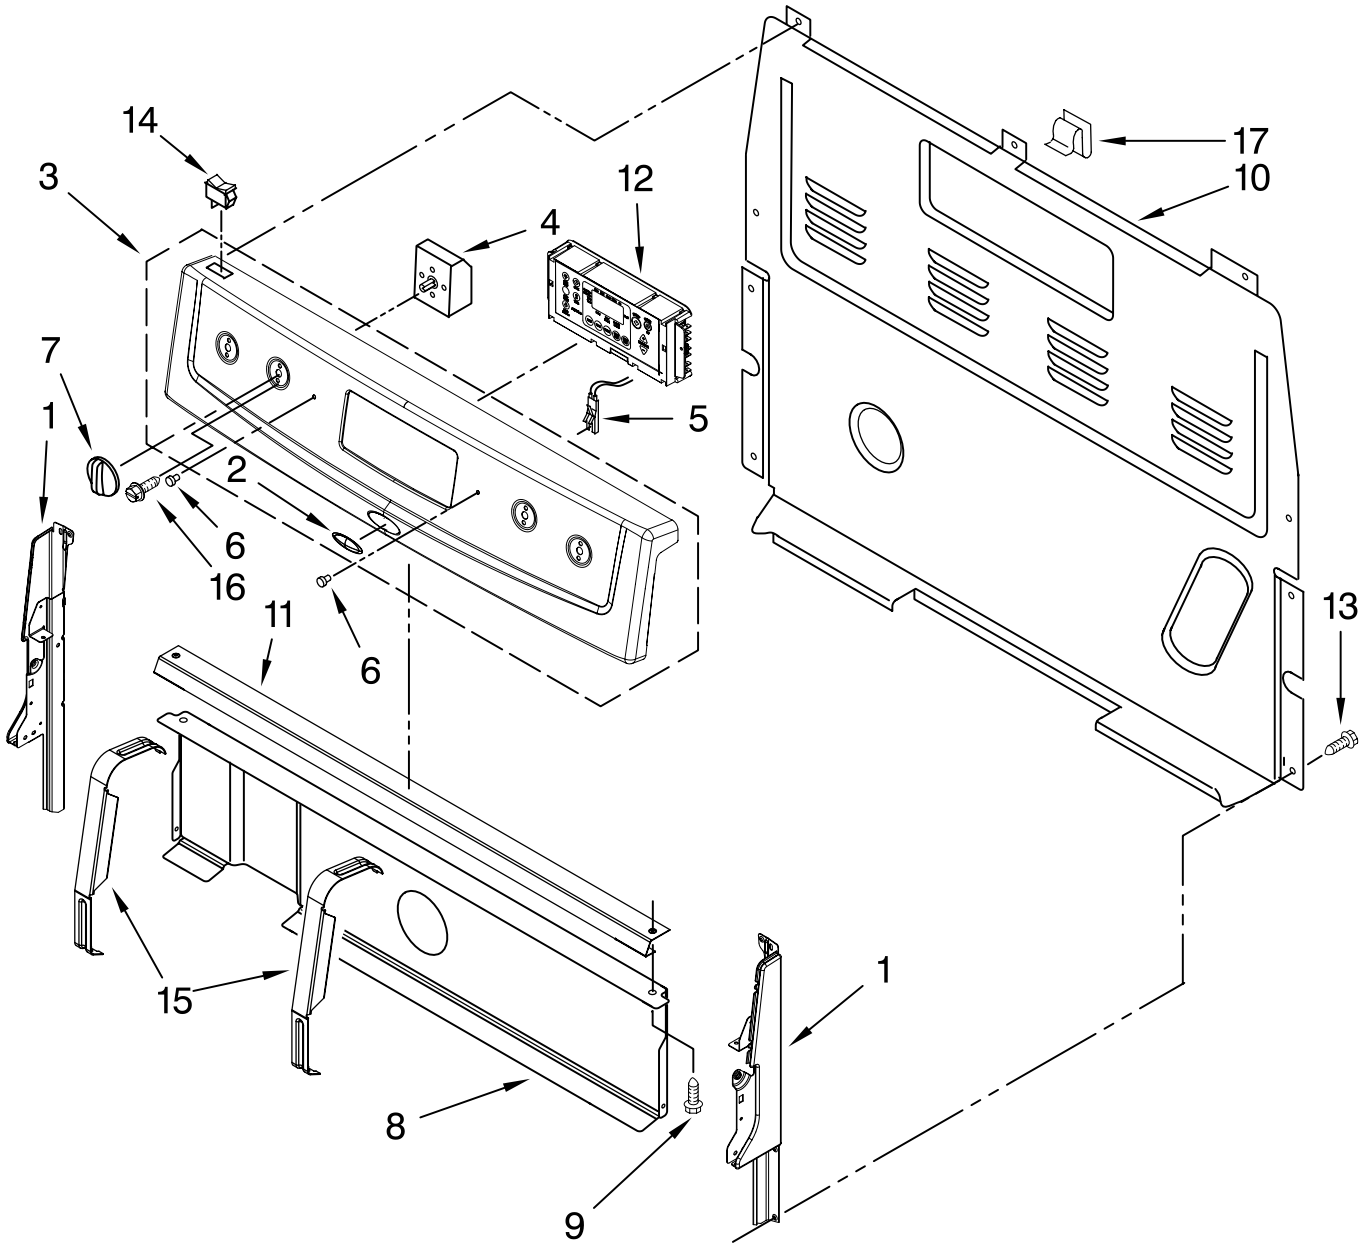

Illus. No.	Part No.	DESCRIPTION
1		Endcap
	W10009080	Black Left
	W10009090	Black Right
	W10009040	White Left
	W10009050	White Right
2	9757609	Nameplate
3		Panel, Control
	W10118052	Black
	W10117604	White
	W10118053	Stnls./Univ. Silv.

Illus. No.	Part No.	DESCRIPTION
4		Switch, Infinite
	9758060	LF,RF
	3148951	LR,RR
5	8523265	Light, Ind. (2)
6	3196068	Lens, Light (2)
7		Knob, Infinite (4)
	9761964	Black
	9761962	White
8	8523280	Shield, Heat
9	3196166	Screw
10	8272473	Cover, Upper
11	9762095	Brkt−Mntg, Console

Illus. No.	Part No.	DESCRIPTION
12		Control, Range
	W10108140	Black
	W10108130	White
13	3196178	Screw
14		Switch, Rocker
	3149360	White
	3148564	Black
15	9762078	Brkt−Mntg, EOC
16	3400882	Screw
17	8273564	Clip

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF367LXSQ2, RF367LXSB2, RF367LXSS2, RF367LXSY2
(Designer White) (Black) (S.Steel) (Universal Silver)

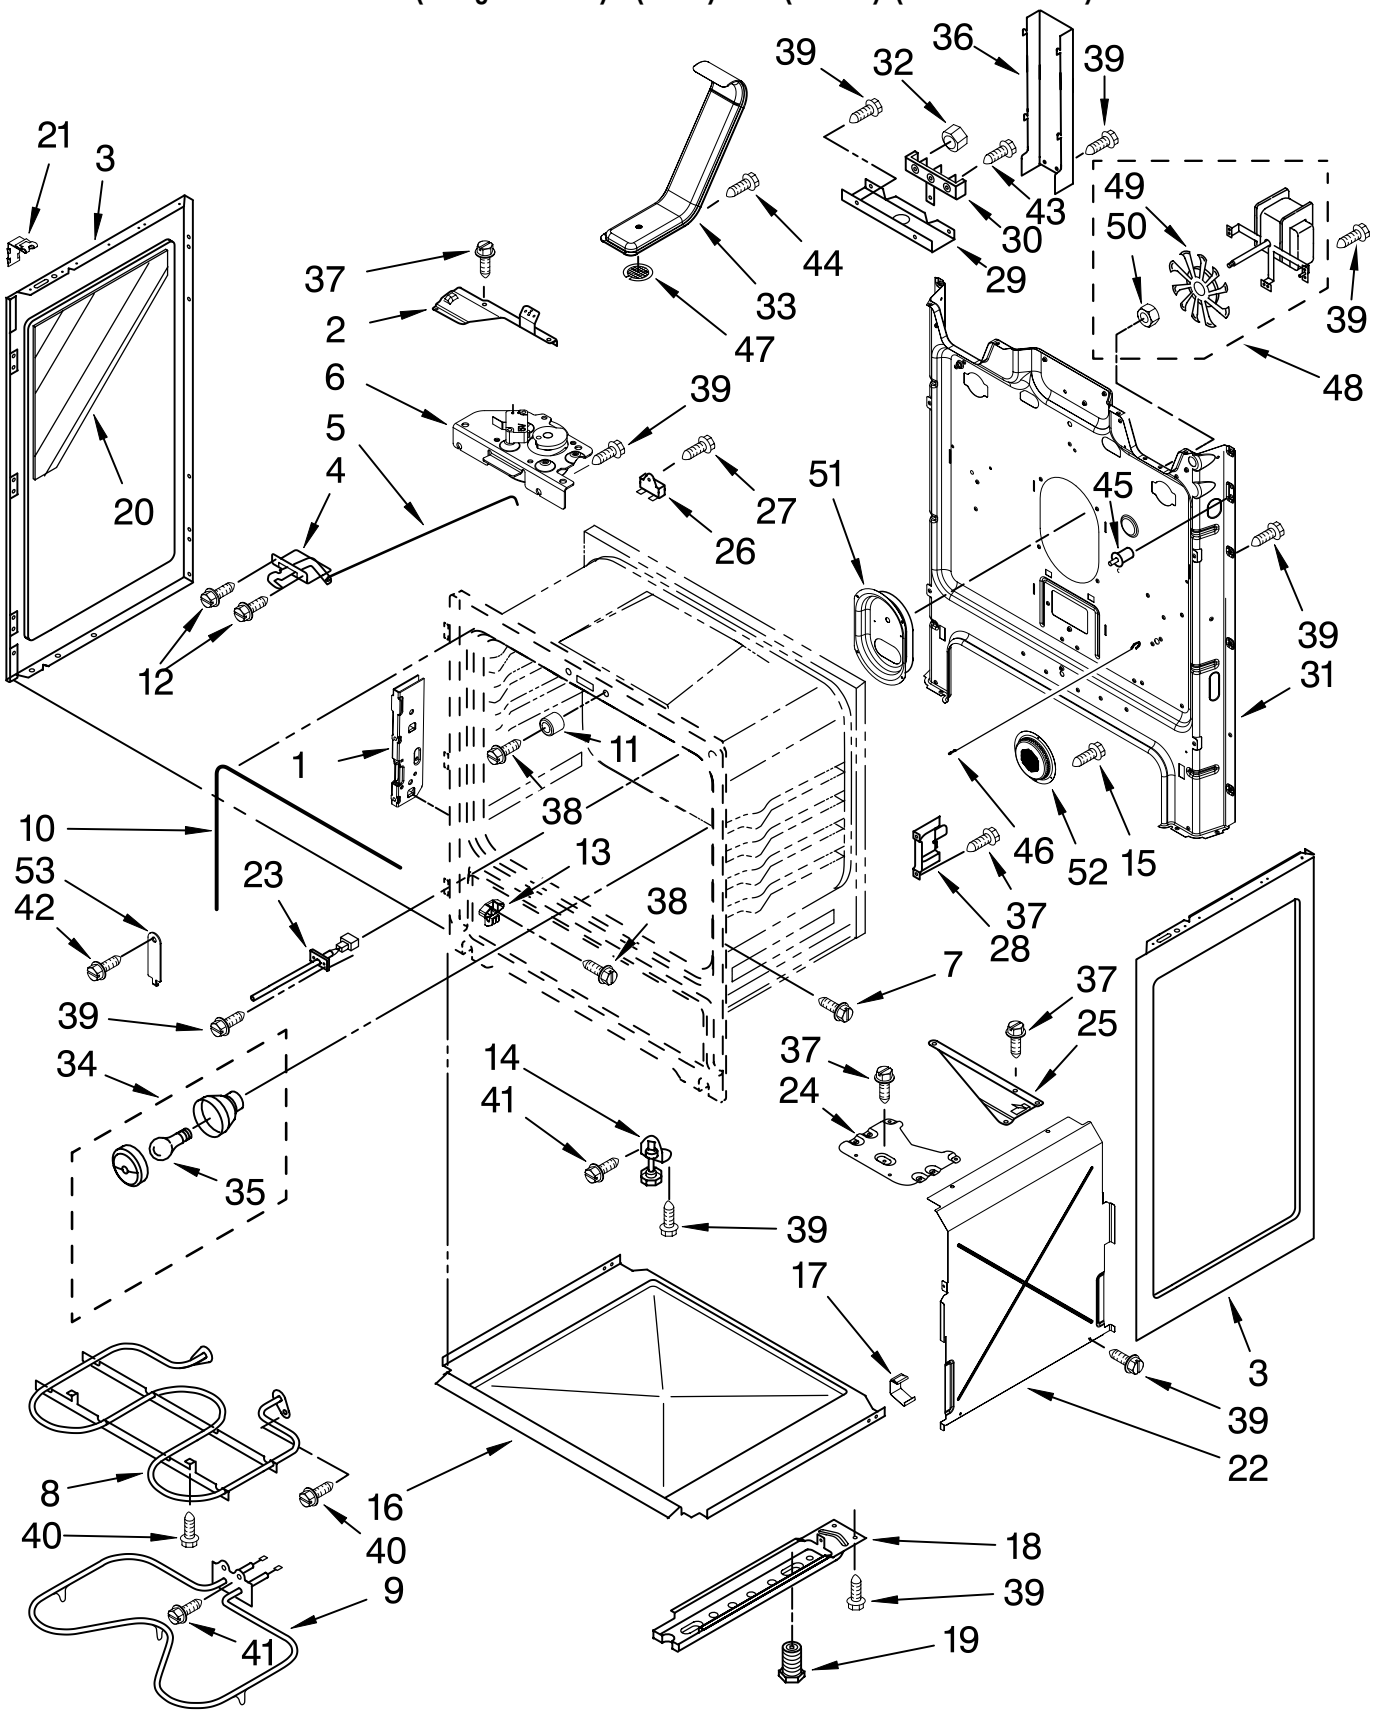

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CHASSIS PARTS

For Models: RF367LXSQ2, RF367LXSB2, RF367LXSS2, RF367LXSY2
(Designer White) (Black) (S.Steel) (Universal Silver)

Illus. No.	Part No.	DESCRIPTION
1	9760407	Brkt−Mntg,Dr Hnge
2	8273905	Support, Corner LR
3		Panel, Side (2)
	8053830	White−Textured
	8053832	Black−Textured
4	9761013	Latch, Door
5	W10078380	Rod, Latch
6	W10107830	Latch Asy, Rear
7	W10067840	Screw
8	9757340	Element, Broil
9	9758541	Element, Bake
10	8522416	Seal, Oven Door
11	9758701	Spacer, Door
12	3196560	Screw
13	W10114344	Glide, Drawer (2)
14	3196037	Foot, Front (2)
15	4449809	Screw
16	8054068	Tray, Insulation
17	3196576	Clip, Panel (6)
18	9760314	Rail, Base (2)
19	W10058460	Foot, Rear (2)
20	9761490	Insulation
21	9761512	Clip− Mounting
22	9758238	Retainer, Side (2)
23	8273902	Sensor, Oven
24	3195736	Support, Front (2)
25	3195987	Support, Corner RR
26	3196548	Fuse, Thermal
27	3196172	Screw
28	3186116	Support, Oven (2)
29	3186034	Bracket, Service
30	9761958	Block, Terminal
31	9757029	Back, Main
32	112432	Nut (3)
33	9761299	Vent Tube Asm
34	3196701	Light Socket Assy
35	311255	Bulb, Oven Light
36	9758283	Cover, Box
37	3196165	Screw
38	3196168	Screw
39	3196178	Screw
40	3196174	Screw
41	3196179	Screw
42	W10031780	Screw
43	3400016	Screw
44	3196566	Screw
45	9757238	Switch − Door
46	9757239	Rod − Door Switch Rear Mount
47	9761301	Screen − Catalyst
48	9758925	Fan, Motor Cnvctn
49	4452226	Blade, Fan
50	4452227	Nut
51	9755776	Bracket, Fan
52	9755775	Cover, Fan
53	9761517	Clip,Door Mntg(2)

INSULATION

	8272616	Insulation, Wrap
	9755772	Insulation, Back
	8272613	Insulation, Vent

DRAWER & BROILER PARTS

For Models: RF367LXSQ2, RF367LXSB2, RF367LXSS2, RF367LXSY2
(Designer White) (Black) (S.Steel) (Universal Silver)

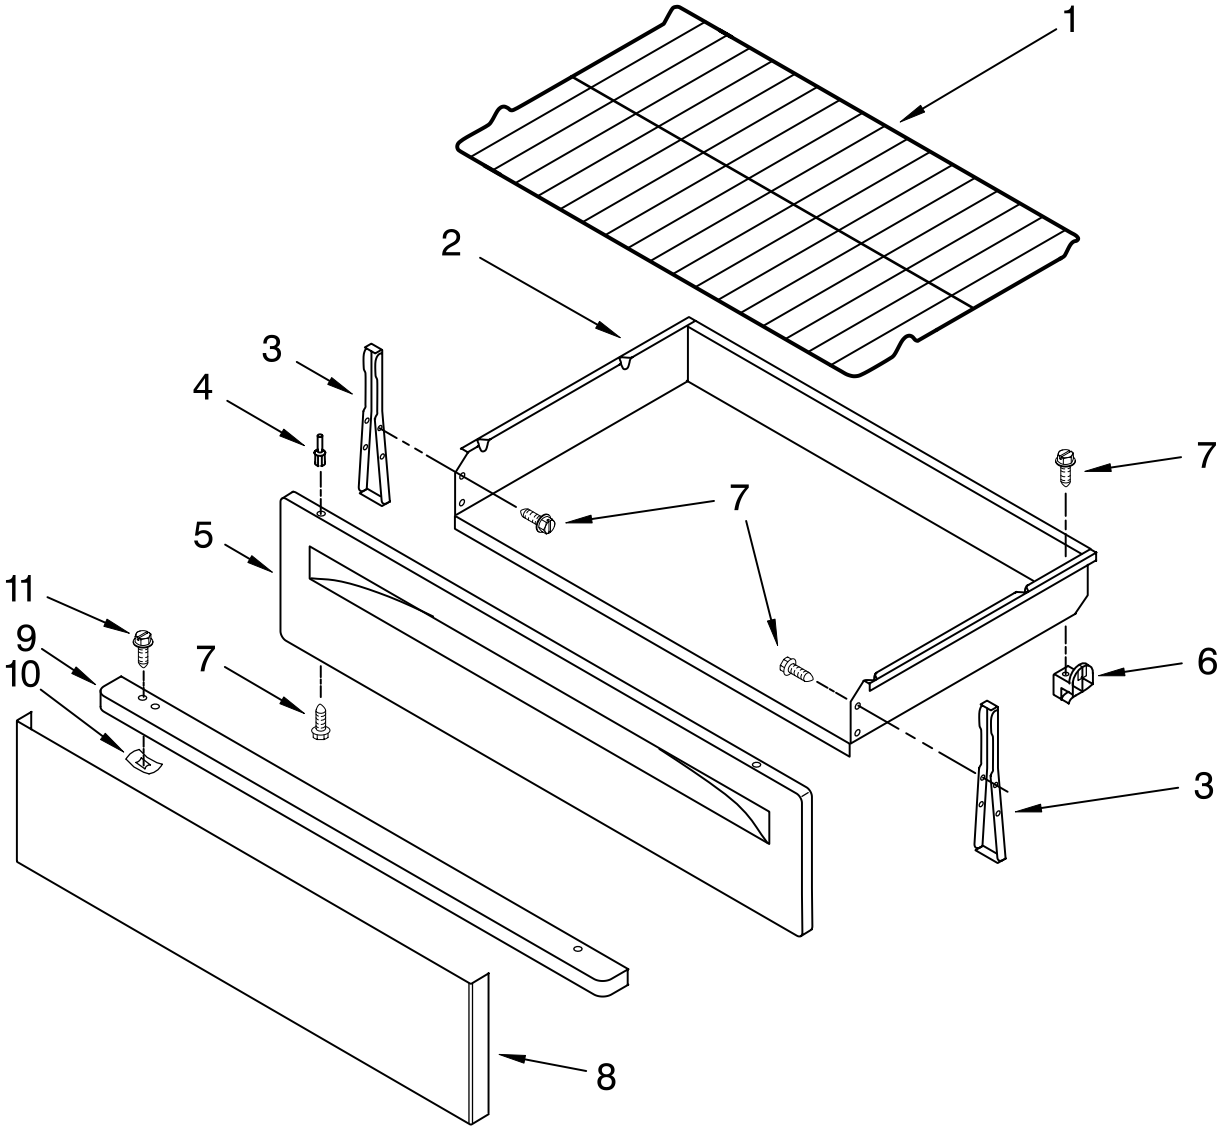

Illus. No.	Part No.	DESCRIPTION
1	W10138079	Rack, Oven (2)
2	9761031	Drawer, Storage
3	9758200	Bracket, Drawer(2)
4		Rivet, Push (2)
	3196814	White
	3196813	Black
5		Drawer Front
	8053339	White
	8053341	Black
6	8053334	Glide, Drawer (2)
7	3196168	Screw
8	9755798	Panel,Stls/Unv Slv
9		Handle
	9757219	Stainless Steel
	9762251	Universal Silver
10	9781235	Clip,(Stls/Unv Sl)
11	W10031790	Screw(Stls/Unv Sl)

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR PARTS

For Models: RF367LXSQ2, RF367LXSB2, RF367LXSS2, RF367LXSY2
(Designer White) (Black) (S.Steel) (Universal Silver)

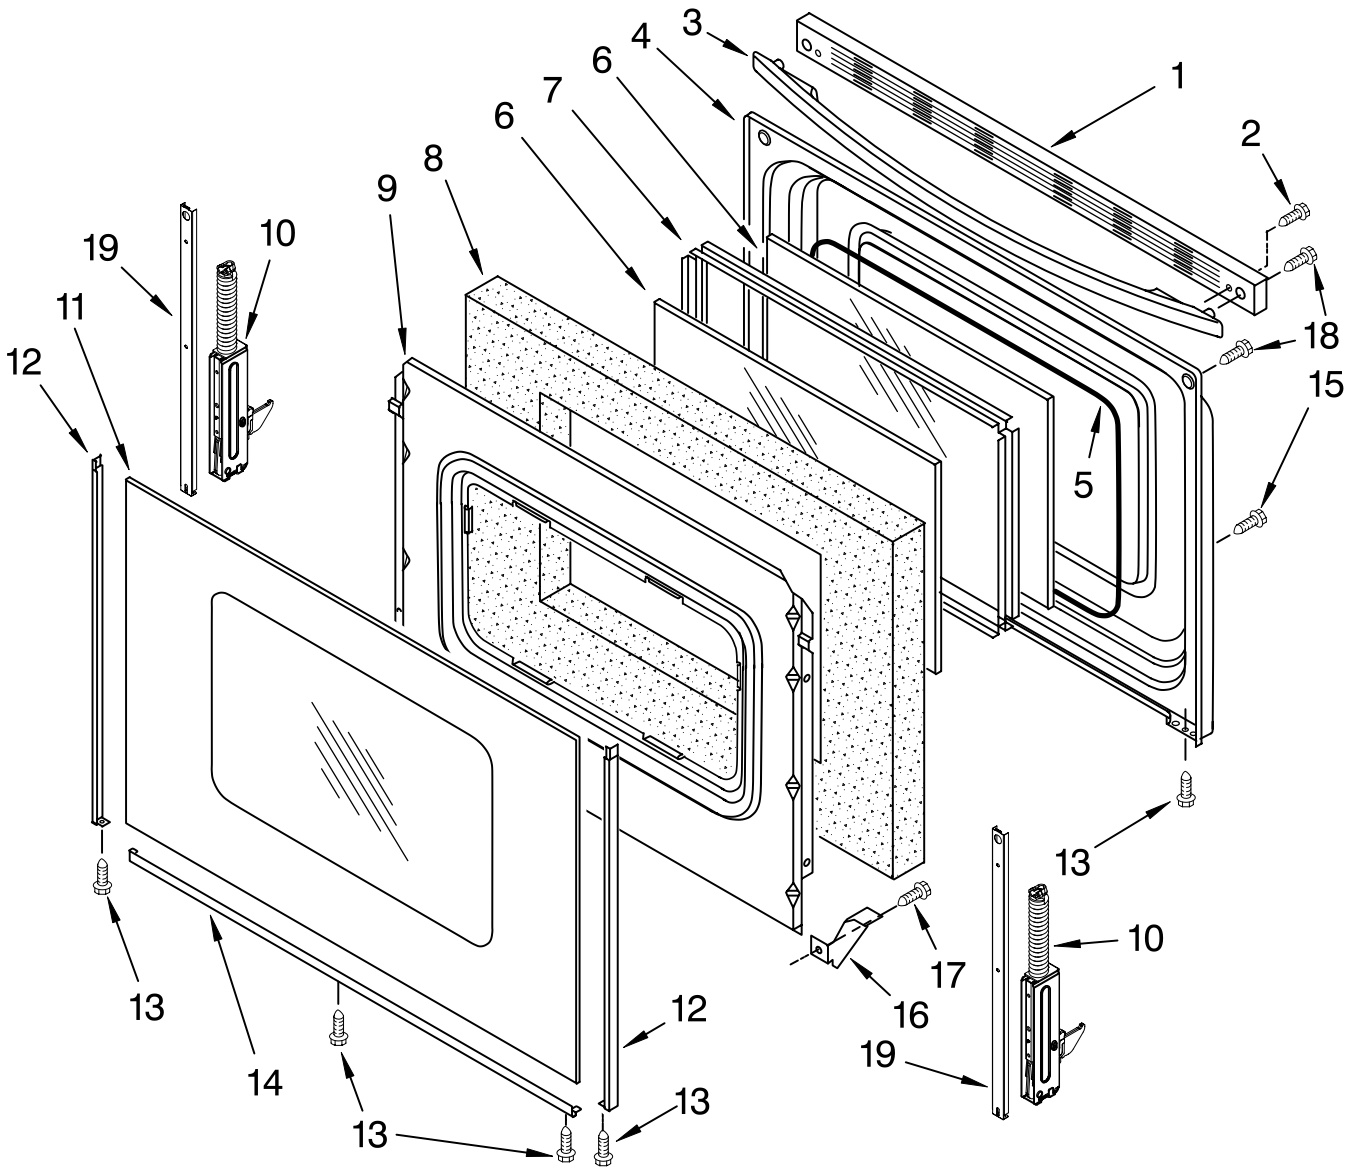

Illus. No.	Part No.	DESCRIPTION
1		Trim, Top
	9762391	Black
	9761975	White
	9762394	Black Stainless
	W10067560	Universal Silver
2	3196164	Screw
3		Handle, Door
	9761983	Black
	9761982	White
	9761985	Universal Silver
4	9761344	Liner, Door
5	8522414	Seal, Window
6	9758162	Glass, Inner (2)
7	3186289	Frame, Glass
8	8272618	Insulation, Door
9	9761357	Retainer, Insltn
10		Hinge, Door (2)
	9761493	White,Black,Unv.Sl
	9761496	Stnls. Model
11		Glass, Outer Door
	W10075990	Black
	W10075980	White
	9756435	Black Stainless
12		Trim, Side
	W10128571	Black Left
	W10128562	Black Right
	W10128572	White Left
	W10128563	White Right
	W10128577	Gray Left
	W10128568	Gray Right
13	3196160	Screw
14		Trim, Bottom
	8523177	Black
	8523175	White
	8523180	Black Stainless
	W10067550	Universal Silver
15	W10031790	Screw
16	3196794	Bracket, Window(2)
17	3196165	Screw
18	W10031780	Screw
19	W10113759	Strap, Door

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OPTIONAL PARTS

For Models: RF367LXSQ2, RF367LXSB2, RF367LXSS2, RF367LXSY2
(Designer White) (Black) (S.Steel) (Universal Silver)

Illus. No.	Part No.	DESCRIPTION

Parts Not Illustrated and Optional Parts (Not Included)

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150° c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242827	Wire, Yellow 14 Ga. 150°c

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean(1/2 Pt)
261582	Grease

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2" x 22" x 120")

PAINT, TOUCH−UP (1/2oz.)

72017	White
4392899	Biscuit
511873	White Porcelain (2 Oz.)

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
4392901	Biscuit
285006	Superior Black
206922	Primer (White)

PAINT, BULK (1 qt.)

799344	White (Uncut)
4392900	Biscuit(Uncut)

ACCESSORY PARTS

241430	Foil, Aluminum Oven (18" x 25')
3191048	Cleaner, Glass

ANTI−TIP KIT

W10017440	Anti−Tip Kit

WIRING HARNESS PARTS

W10115055	Harness, Wire (Cooktop Left)
W10115056	Harness, Wire (Cooktop Right)
W10084710	Harness, Wire (Sensor/Dr Switch)
W10083510	Harness, Wire (Main)
8523279	Wire, Ground
8524132	Shield, Wiring
313660	Clip, Ground Wire
3196173	Screw
3196154	Screw, Ground